

INSTALLATION GUIDELINE

Driver

Dimming connector splice

**READ & FOLLOW ALL SAFETY GUIDELINES.
SAVE THIS DOCUMENT & DELIVER TO OWNER AFTER INSTALLATION.**



1. Remove the dimming connector off of the original fixture.
2. Disconnect new driver from incoming power.
3. Cut the heatshrink off the end of the dimming cable.
4. Strip outer insulation back 3/4" (Be careful to not cut into the conductors).
5. Strip the conductors to 1/4". Cut the Pink and Blue conductors off if present.
6. Install cord grip side of connector on before wiring the head.
7. Wire the connector head according to the step listed below.

Wiring Instructions

- Black with White Stripe into the ground terminal
- Purple into the 1 terminal
- Gray into the 2/N terminal

8. Assemble the two connector parts by screwing them together.
9. Tighten cord grip on connector to seal onto the cord.

INSTALLATION GUIDELINE

Driver

Dimming connector splice

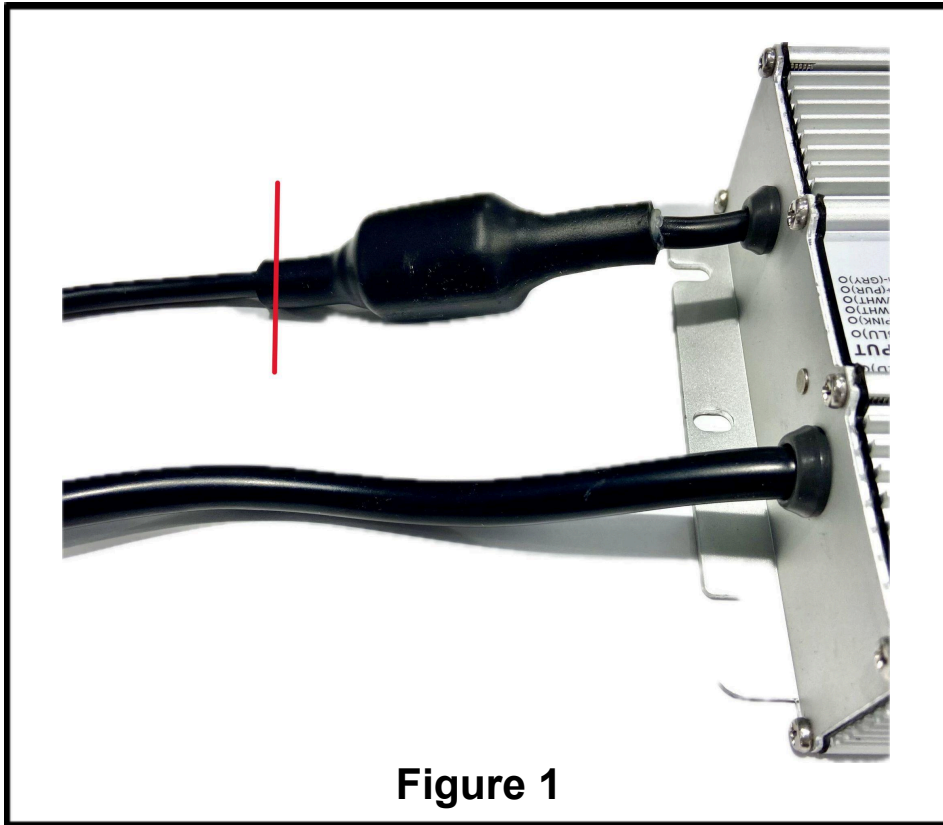


Figure 1

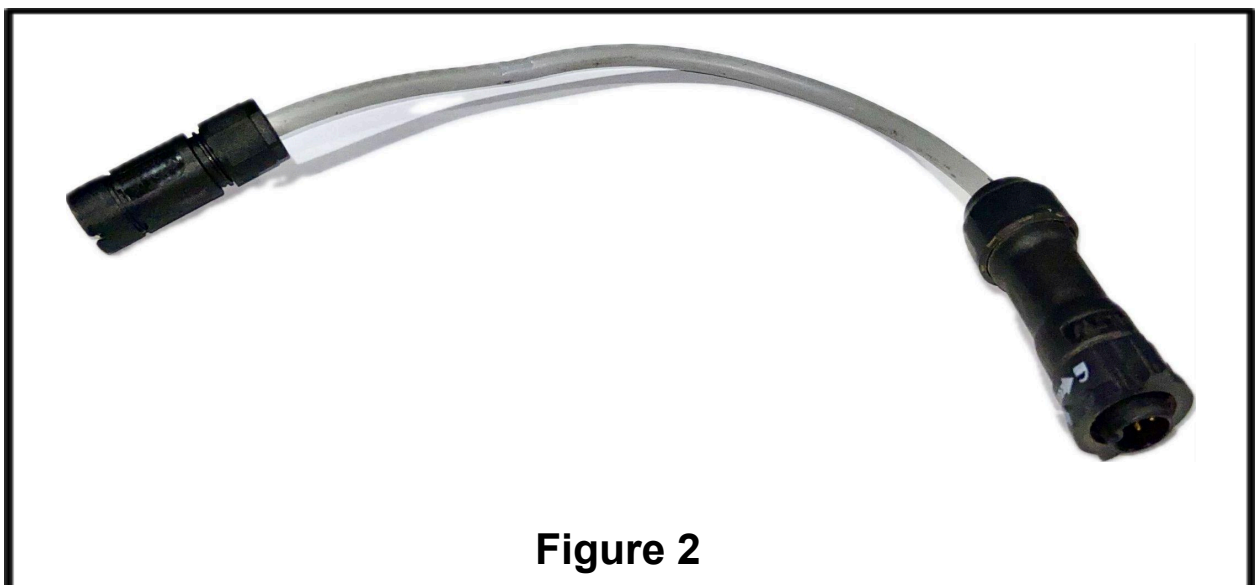


Figure 2