

INSTALLATION GUIDELINE

Driver

EMI Filter Removal


**READ & FOLLOW ALL SAFETY GUIDELINES.
SAVE THIS DOCUMENT & DELIVER TO OWNER AFTER INSTALLATION.**



PARTS NEEDED

- Heat Shrink Tubing (Panduit Wet-Shrink™ HST0.4 or equivalent)- 3” per driver
- Butt Splices (3M 94785 18-22 AWG or equivalent)- Qty 3 per driver

Original Driver Reference

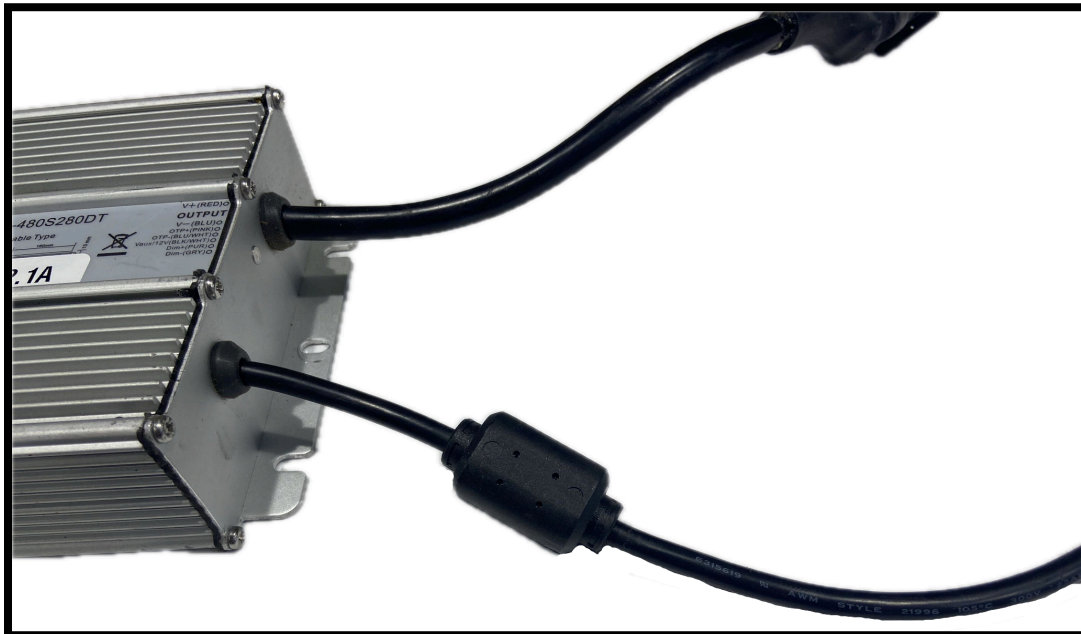


INSTALLATION GUIDELINE

Driver

EMI Filter Removal

-Cut EMI filter flush with the plastic on both sides to give as much cable as possible.

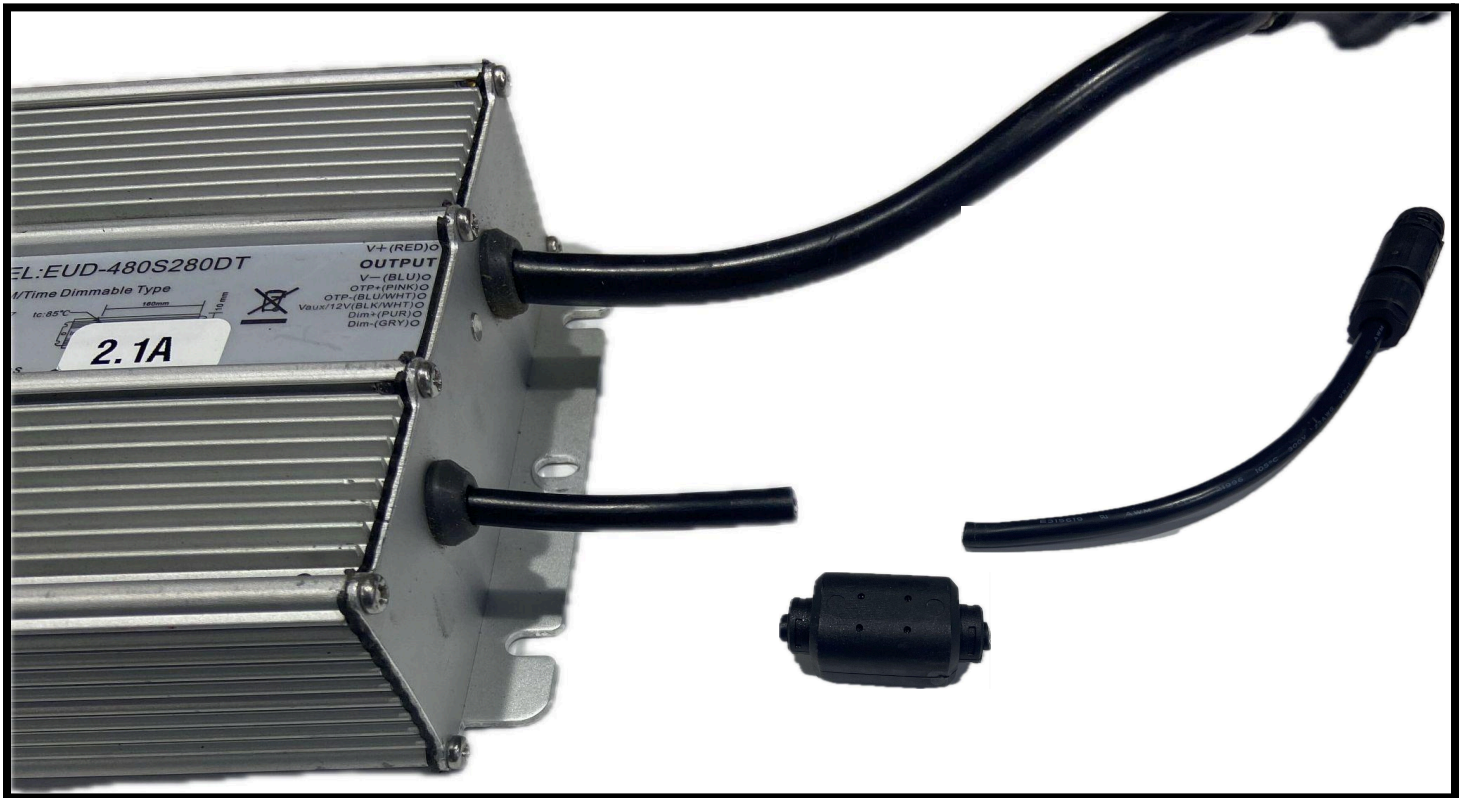


INSTALLATION GUIDELINE

Driver

EMI Filter Removal

- Strip outer insulation on both cables to 1" and individual conductors to 5/16".
- Cut flush the pink and blue wires (Unused).

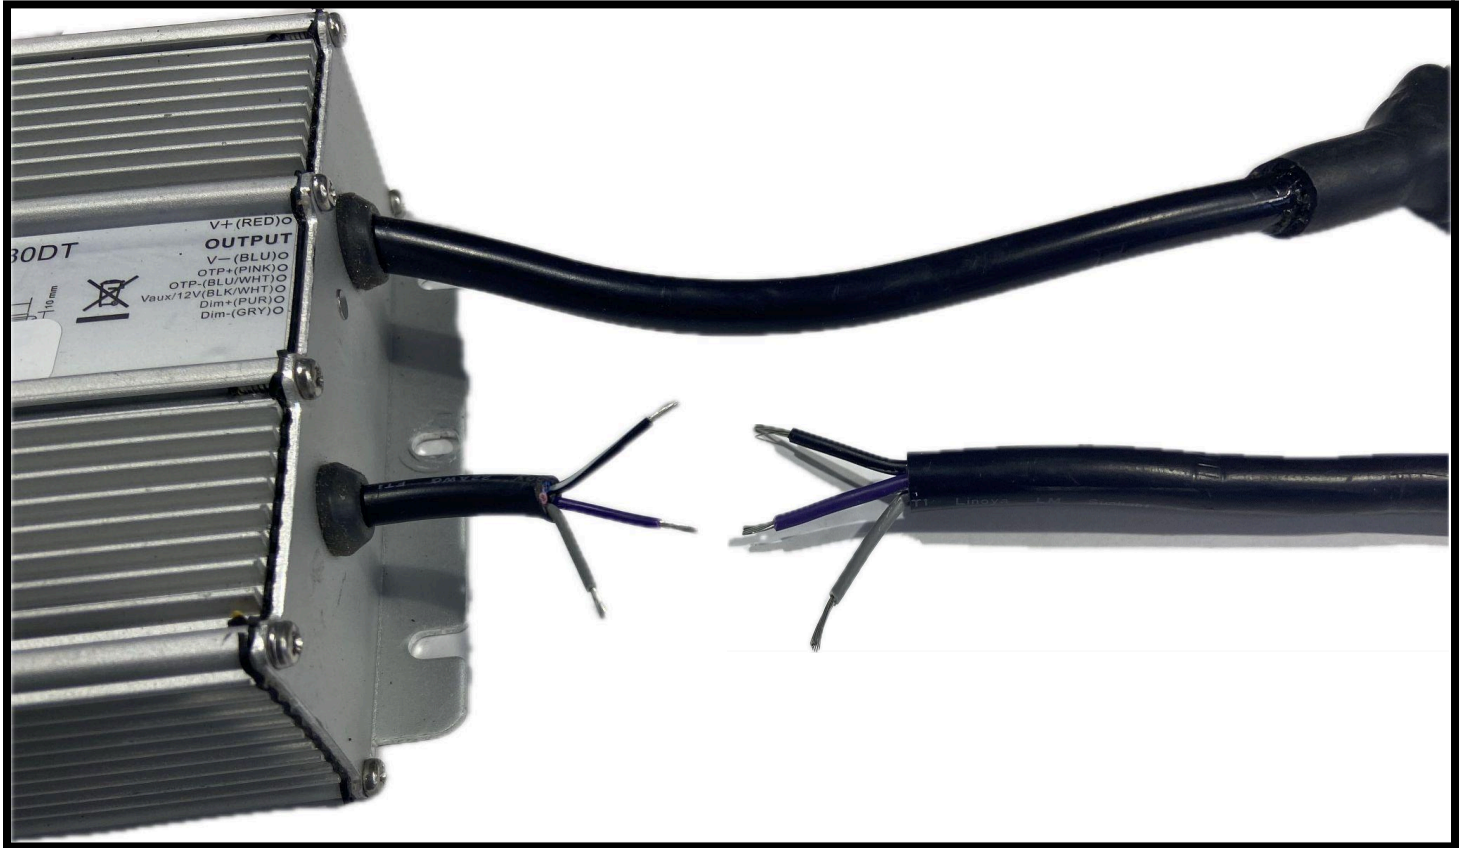


INSTALLATION GUIDELINE

Driver

EMI Filter Removal

- Install heat shrink onto cable before crimping!
- Crimp all 3 butt splices. Match conductor colors.
- Pull test each crimp joint to ensure a good connection.

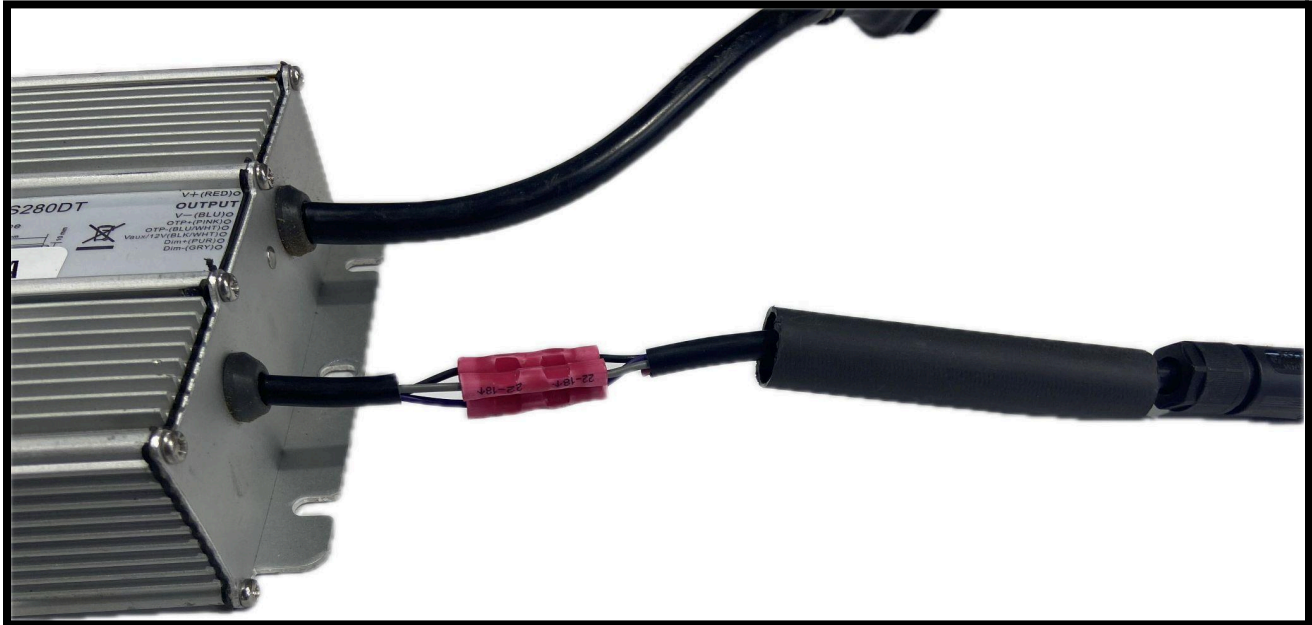

INSTALLATION GUIDELINE

Driver

EMI Filter Removal

- Using a heat gun; shrink the tubing around the crimp joints
- Make sure it seals on the outer insulation.
- Heat until the glue comes out of each end.

