

INSTALLATION GUIDELINE

Driver

Dimming connector splice

**READ & FOLLOW ALL SAFETY GUIDELINES.
SAVE THIS DOCUMENT & DELIVER TO OWNER AFTER INSTALLATION.**



1. Disconnect driver from incoming power before programming!
2. Remove the splice compartment cover screws. (See Figure 1)
3. Remove the splice compartment cover.
4. Locate the dimming cable coming out of the driver (Small cable on the output side of the driver. (The end of the cable will be heatshrunk.)
5. Remove heatshrink and strip cable jacket back to expose the conductors.
6. Connect the driver dimming wires into the driver programming wires. Follow the wiring instructions below.

Wiring Instructions- Programmer

- Black with White Stripe to BLACK
- Purple to PURPLE
- Pink to PINK

7. Press the button on the programming box.
 - a. Beep and Green light- Programming was successful.
 - b. No beep and Red light- Programming was unsuccessful.
8. Once the driver is programmed, remove the dimming wires from the programmer.
9. Reapply heat shrink tubing to dimming cable.
10. Install splice compartment cover.
11. Restore supply power.

INSTALLATION GUIDELINE

Driver

Dimming connector splice


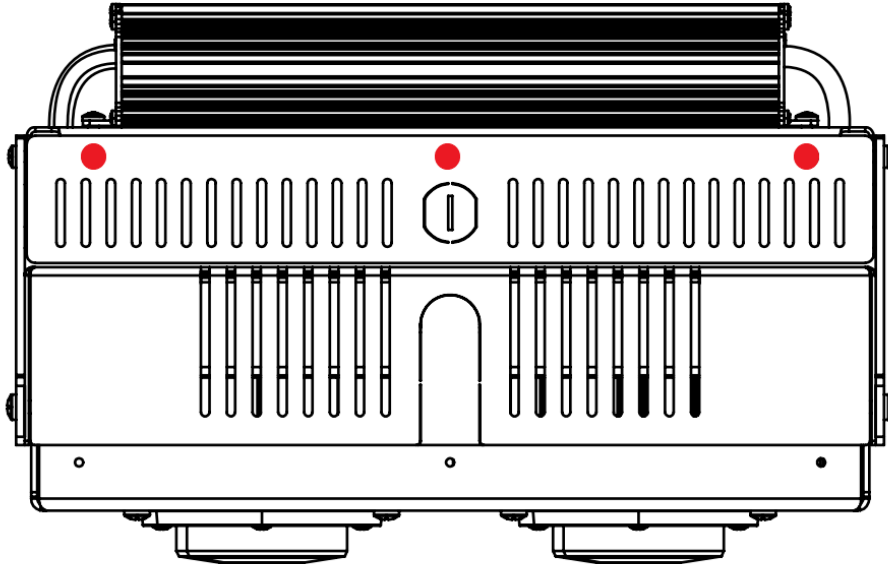


Figure 1

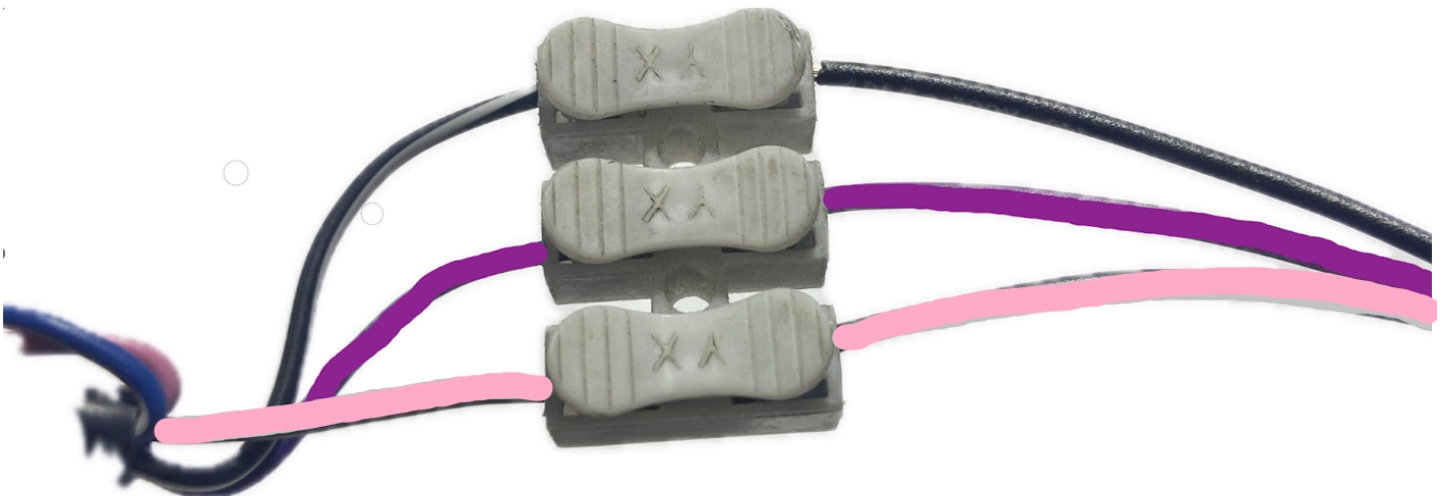

INSTALLATION GUIDELINE

Driver

Dimming connector splice

- Insert the USB into the USB Receptacle on the charger.
- PUSH USB Button to turn the charger on (Lights on programmer will turn on)

